## **User Manual**

Advance 4 Bay Wireless Charger for the KYOCERA® DURAFORCE PRO™







Charger 1. Part # AT4-1049A Power Adapter 2. Part # AT9973A




# Index

| Page | Details |
|------|---------|
|      |         |



#### OPERATING INSTRUCTIONS

- 1. Insert the male round metal plug "A" at the end of the AC adapter into the corresponding female socket "B" on the unit. [Diagram 1]
- 2. Plug the AC adapter "C" into a suitable wall outlet. At this point the red LED indicators will light and blink to indicate "Stand By" position. [Diagram 1]
- 3. Place one -four mobile phones on the unit.
- 4. As each phone is inserted in place on the unit, the **red LED** of that unit will blink show that the battery is being charged.
  - a) the blinking red LED remains on after a phone is placed on the unit, refer to "Trouble Shooting" further on in these instructions.
- 5. When the phone is fully charged, the green LED indicator will light solid showing that the unit has switched to a maintenance mode. It is quite safe for both the battery and the unit to leave the phone on the unit with the solid green LED. While in this maintenance mode the unit will keep the battery at 100% peak condition without ever overcharging the battery.
- 7. During the charging cycle the unit and the battery may become warm. This is quite normal and is not harmful to either the battery or the radio.

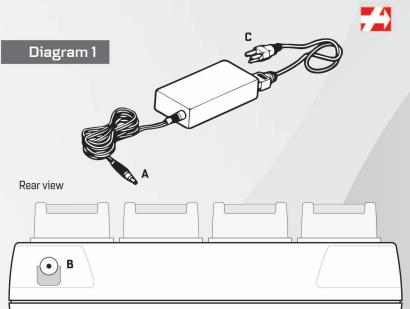

#### TROUBLESHOOTING

- 1. If the **red LED** indicator does not light after the AC adapter is plugged into the wall outlet:
  - (a) Check that the wall socket is powered and that the AC adapter is properly seated in the outlet.
  - **(b)** Check that the plug into the unit and the cigarette lighter plug into the cigarette lighter adapter (if being used in a vehicle) are properly seated.



#### **-WARNING**



- 1. Do not use an-AC adapter other than those supplied with the unit
- 2. Do not short circuit the output on any of the units.
- 3. The unit is a highly sophisticated electronic device, which may be damaged if handled roughly or dropped.

### LED PHONE INDICATOR

Solid Red Charging Solid Green Phone Fully Charged

#### SPECIFICATIONS

**AC Adapter** 

Input: 120 - 240V AC 50 - 60Hz

Output: 15VDC 4A



#### WARRANTY

Your charger product has a one-year limited warranty from date of purchase against defects in material and workmanship. Under this warranty, you may return a faulty product to AdvanceTec and AdvanceTec will either repair or replace the faulty product free of charge. To return a faulty product for repair or replacement, please call AdvanceTec in the USA at 305-623-3939 to obtain a Return Material Authorization number. If outside of the USA, contact your authorized AdvanceTec dealer for a Return Material Authorization This warranty covers only defects in material or workmanship in normal use and not damage from negligent handling, misuse, charging of batteries other than those the charger was specified and designed to charge, or lack of proper care.

**Important: Opening of the charger will void this warranty.** This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

OTHER THAN AS EXPRESSLY SET FORTH ABOVE, AdvanceTec Industries, Inc DOES NOT MAKE ANY EXPRESS OR IMPLIED WARRANTIES OR REPRESENTATIONS REGARDING THEIR PRODUCTS. ANY IMPLIED WARRANTIES OF MERCHANTABILITY, NONINFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED AND DISCLAIMED.

**AdvanceTec** will not be liable or responsible for any loss, damage, or injury caused by any failure of its products to operate properly or promptly.



1150 NW 163rd Drive, Miami, FL 33169 T: 305-623-3939 F: 305-623-3996