

User Manual

AdvanceCommunicator for the
KYOCERA® DURA XV™



ADVANCETEC
INDUSTRIES INC

www.advancetec.com



AdvanceCommunicator # AT3075A consists of:

- 1.** Part #AT3075A Desktop
- 2.** Part # AT3051-02A Handset
- 3.** Part #AT9972B Power adapter
- 4.** Part #AT099-0099 Cables



Index

Page	Details
3	Important Phone Settings
4	Setting Up The AdvanceCommunicator
5	Installing the portable into the AdvanceCommunicator™
7	Making and Receiving calls in Hands Free Mode.
8	Making and Receiving calls via the Handset.
9	Use of the AdvanceCommunicator™ with Dispatch calls
9	Volume Control
9	Recording Feature
10	Summary of LED Indicators
10	Charging The Battery



■ IMPORTANT PHONE SETTINGS


The following phone settings are necessary to enable use of the phone with the AdvanceCommunicator:

1. Press > **Settings** > **DC Settings** > **Direct Connect ON**
2. Press > **Settings** > **DC Settings** > **Headset Mode** > **Headset button starts DC calls**. [DC button].
3. Press > **Settings** > **Others** > **Accessibility** > **TTY** > **TTY Off**.
4. **Increase or Decrease the volume** must be done while phone is connected to the unit and is on an active call.



Diagram 1

 Rear bottom view

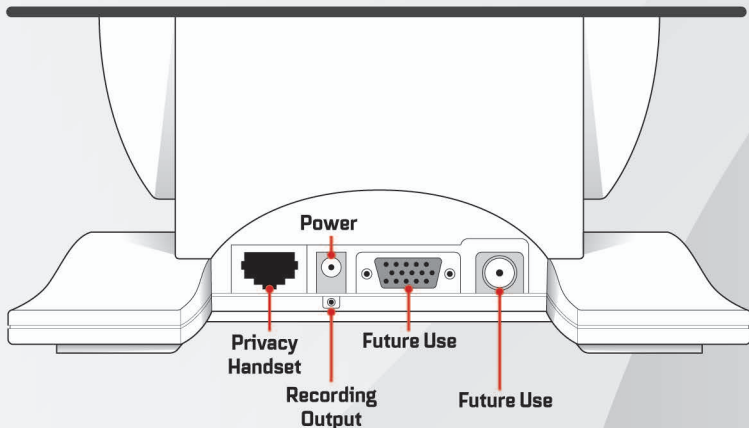


■ SETTING UP THE ADVANCECOMMUNICATOR™

1. Place the **AdvanceCommunicator™** in a convenient position within easy reach of an AC power outlet.
2. Attach the plug at the end of the coil cord of the handset into the corresponding **RJ45 handset** receptacle on the back of the **AdvanceCommunicator™**.
3. Plug the power supply into the wall AC power outlet and the round barrel plug at the end of the cord of the power supply into the corresponding power receptacle on the back of the **AdvanceCommunicator™**
4. At this point the **LED will flash RED**



 Diagram 2

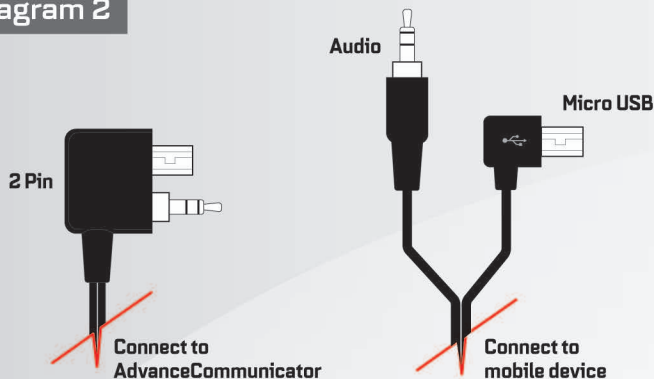


■ INSTALLING THE PORTABLE INTO THE ADVANCECOMMUNICATOR™

1. Plug the two **(2) pin connector** into the corresponding socket on the left bottom side of the **AdvanceCommunicator™** (Diagram 2 and 3)
2. Remove the rubber protective cover from the connector receptacle covering the **micro USB connector** on the right side of the handset (handset facing you) align the **micro USB connector** at the end of the one cable and insert the connector into the handset.
3. Remove the rubber protective cover from the connector receptacle covering the audio connector on the top of the handset (handset facing you) and insert the round audio plug into the top of the audio connector on the handset.



 
Left side view

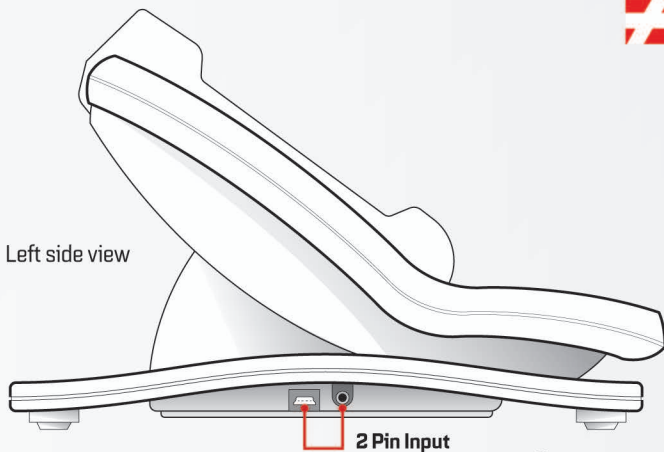

2 Pin Input

Diagram 3

 Right side view

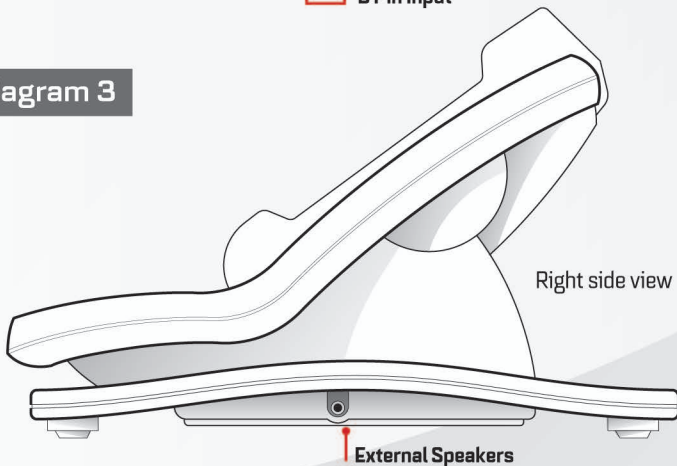

External Speakers



4. Insert the bottom of the handset behind the **ridge on the cradle** and press the top of the handset back into the Cradle until it snaps into place.

5. Turn the Handset on.

6. To remove the handset from the Cradle, move the Handset forward out of the cradle.

■ MAKING AND RECEIVING CALLS IN HANDS FREE MODE.

1. To make a call in Hands-free mode, dial the desired number on the phone keypad and **press SEND/GREEN BUTTON**. Speak towards the Microphone which is situated on the **bottom right corner** of the **AdvanceCommunicator™ USB Connector Audio Connector 2 Pin into AdvanceCommunicator™**.

2. The voice of the person you are calling will be heard via the built-in speaker in the **AdvanceCommunicator™**

3. To receive a call in Hands-free mode, **press SEND/GREEN BUTTON** on the phone or press shortly on the **PTT/Space bar** and speak towards the Microphone. The caller's voice will be heard via the built-in speaker in the **AdvanceCommunicator™**

4. To end a call in hands-free mode press the **END/RED button** on the phone.



■ MAKING AND RECEIVING CALLS VIA THE HANDSET.

1. To make a call using the **AdvanceCommunicator™ Handset**, dial the desired number on the phone's keypad and press **SEND/GREEN button**. Use the handset as you would with a regular desktop phone.
2. To receive a call with the Handset, lift the Handset and press the **SEND/GREEN button** on the phone's keypad. Use the handset as you would with a regular desktop phone.
3. To end a call while using the handset, place the handset back into the cradle and **press the END/RED button** on the phone.



■ USE OF THE ADVANCECOMMUNICATOR™ WITH DISPATCH CALLS

1. To answer a dispatch call in Hands-free mode, **press and hold down the PTT/Space Bar** and speak towards the Microphone.
2. To answer a dispatch call using the handset, pick up the handset, press and hold down the **round PTT button** on the back of the Handset and speak into the handset as you would with a regular desktop phone.
3. To hear the other party in a dispatch call, release the **PTT/Space bar (in Hands-free mode)** or the **round PTT handset button** if using the Handset

■ VOLUME CONTROL

The volume of the **AdvanceCommunicator™** can be increased or lowered with the volume buttons on the side of the phone.

■ RECORDING FEATURE

1. The **AdvanceCommunicator™** will allow the recording of audio traffic with an external recording device via a 3.5mm plug on the back of the **AdvanceCommunicator™**.
2. Dispatch calls will be recorded both audio in and audio out.
3. Cellular calls will be recorded audio-in.



■ SUMMARY OF LED INDICATORS

Flashing RED:

Phone not connected to the Base

Steady RED:

Phone is connected to the Base with
power OFF

Steady GREEN:

Phone connected with power ON

CHARGING THE BATTERY

With the portable turned off, the **AdvanceCommunicator™** will charge the battery of the handset.



OPTIONAL ACCESORIES

*not included, available for purchase.

PART # AT8428A – PALM MIC

1. To use a Palm Mic. with the AdvanceCommunicator™ unplug the privacy handset supplied with the unit (and remove it from its cradle) and plug the RJ45 connector of the Palm Mic into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™

2. Once connected, the pressing of the switch on the Palm Mic. will activate the Palm Mic.



PART # AT8421A – HEADSET

1. To use the Headset with the AdvanceCommunicator™ unplug the privacy handset supplied with the unit (and remove it from its cradle) and plug the RJ45 connector of the headset into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™

2. Once connected, audio will be transferred to the Headset.





3. PTT calls can be made with the PTT/Space Bar or the PTT button on the cable on the Headset.

PART # AT8400A – FOOT PEDAL

1. To use the Foot Pedal with the AdvanceCommunicator™ unplug the privacy handset supplied with the unit (and remove it from its cradle)

2. Plug the RJ45 connector of the Y Adapter Cable (**Part # AT8405A supplied**) into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™

3. Plug the RJ45 connector of the Foot pedal into one of the corresponding RJ45 receptacle of the Y Adapter Cable **AT8405A**.

4. To use both the Headset and Foot Pedal with the AdvanceCommunicator™ simultaneously, use the Y connector adapter **Part # 8405A** supplied with the Foot Pedal..



RJ45 connector



5. Unplug the privacy handset supplied with the unit (and remove it from its cradle) and plug the RJ45 connector of the Y Adapter Cable into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™

6. Plug the Headset and Foot Pedal into the corresponding RJ45 receptacles of the Y Adapter Connector.



NOTE: If neither the headset nor Foot Pedal work, swap around the plugs into the Y Adapter Connector.

7. Once connected, the Headset and Foot Pedal will function as set out above.



■ WARRANTY

Your product has a one-year limited warranty from date of purchase against defects in material and workmanship. Under this warranty, you may return a faulty product to AdvanceTec and AdvanceTec will either repair or replace the faulty product free of charge. To return a faulty product for repair or replacement, please call AdvanceTec in the USA at 305-623-3939 to obtain a Return Material Authorization number. If outside of the USA, contact your authorized AdvanceTec dealer for a Return Material Authorization. This warranty covers only defects in material or workmanship in normal use and not damage from negligent handling, misuse, charging of batteries other than those the charger was specified and designed to charge, or lack of proper care.

Important: Opening of the product will void this warranty. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

OTHER THAN AS EXPRESSLY SET FORTH ABOVE, AdvanceTec Industries, Inc DOES NOT MAKE ANY EXPRESS OR IMPLIED WARRANTIES OR REPRESENTATIONS REGARDING THEIR PRODUCTS. ANY IMPLIED WARRANTIES OF MERCHANTABILITY, NONINFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED AND DISCLAIMED.

AdvanceTec will not be liable or responsible for any loss, damage, or injury caused by any failure of its products to operate properly or promptly.



1150 NW 163rd Drive, Miami, FL 33169
T: 305-623-3939 F: 305-623-3996

www.advancetec.com

